

HODNOTY PRŮTOKŮ VODOVODNÍCH BATERIÍ RAVAK

Průtok je udáván v l/min při tlaku 0,3 MPa

RAVAK code	Umyvadlo	Bidet	Vana	Hlavová sprcha	Ruční sprcha	OUT 1	OUT 2	OUT 3
ES 012.XX	5							
ES 014.XX	5							
ES 015.XX	5							
ES 018.XX	5							
ES 019.XX.O1	5							
ES 019.XX.O1.RB07B	5							
ES 021.XX.O1	18							
ES 022.XX			14		16			
ES 032.XX			24					
ES 056.XX		5						
ES 061.XX.O2						19	22	
ES 062.XX.O1						25		
ES 063.XX.O2.RB07C						22	22	
ES 065.XX.O2.RB07D.+S					10		16	
ES 065.XX.O2.RB07E						12	12	
ES 067.XX.O3.RB07C						22	22	22
ES 068.XX.O3.RB07D.+S					10		17	16
ES 068.XX.O3.RB07F						22	22	22
EL 012.XX	5							
EL 014.XX	5							
EL 015.XX	5							
EL 019.XX.O1.RB07B	5				25			
EL 022.XX			13		22			
EL 032.XX			25					
EL 056.XX		5						
EL 061.XX.O2						18	21	
EL 062.XX.O1						25		
EL 065.XX.O2.RB07D.+S					10		18	
EL 065.XX.O2.RB07E						12	12	
EL 068.XX.O3.RB07D.+S					10		17	18
EL 068.XX.O3.RB07F						22	22	22

HODNOTY PRŮTOKŮ VODOVODNÍCH BATERÍ RAVAK

 
Průtok je udáván v l/min při tlaku 0,3 MPa

RAVAK code	Umyvadlo	Bidet	Vana	Hlavová sprcha	Ruční sprcha	OUT 1	OUT 2	OUT 3
PU 014.XX	12							
PU 015.XX	12							
PU 016.XX	12							
PU 019.XX	15							
PU 022.XX			19		11			
PU 022.X1			19		19			
PU 026.XX			21		9			
PU 032.XX					23			
PU 033.00					22			
PU 055.XX		12						
FL 013.XX	12							
FL 014.XX	12							
FL 016.XX	13							
FL 022.XX			21		24			
FL 026.XX			18		11			
FL 032.XX					22			
FL 055.XX		12						
FL 065.XX						25	25	
FL 066.XX						25		
TE 023.XX			21		22			
TE 033.XX					24			
TE 072.XX					23			
TE 082.XX			21		26			
TE 091.XX				19	12			
TE 092.XX			17	12	10			
TE 093.XX				14	11			
TE 092.X1			17	12	10			
TE 093.X1				14	11			
TE 094.XX				16	8			
TD F 012.XX	5							
TD F 014.XX	5							
TD F 015.XX	5							
TD F 022.XX			19		21			
TD F 032.XX					21			
TD F 033.XX					21			
TD F 055.XX		14						
TD F 061.XX						22	21	
TD F 065.00						21	21	
TD F 066.XX						22		
TD F 091.XX				14	11			
TD 012.XX	5							
TD 014.XX	5							
TD 015.XX	5							
TD 022.XX			19		21			
TD 032.XX					21			
TD 033.XX					22			
TD 055.XX		14						
TD 061.XX						22	21	
TD 065.XX						21	21	
TD 066.XX						22		
TD 091.XX				14	11			

HODNOTY PRŮTOKŮ VODOVODNÍCH BATERIÍ RAVAK

Průtok je udáván v l/min při tlaku 0,3 MPa

RAVAK code	Umyvadlo	Bidet	Vana	Hlavová sprcha	Ruční sprcha	OUT 1	OUT 2	OUT 3
CR 011.XX	8							
CR 012.XX	8							
CR 013.XX	8							
CR 014.XX	8							
CR 015.XX	8							
CR 016.XX	14							
CR 019.XX	8							
CR 022.XX			16		17			
CR 025.XX			16		11			
CR 026.XX			15		11			
CR 032.XX					20			
CR 055.XX		15						
CR 063.XX						20	20	
CR 064.XX						20		
CR 065.XX						21	20	
CR 066.XX						21		
CR 067.XX						16	17	17
CR 080.XX			19		14			
CR 112.X1	7				6			
CL 011.XX	11							
CL 012.XX	11							
CL 016.XX	7							
CL 022.XX			15		16			
CL 032.XX					17			
CL 055.XX		10						
CL 061.XX						22	23	
CL 065.00						20	20	
CL 066.00						20		
WF 025.00			19		11			
RS 025.00			19		12			
FM 016.00	18							
FM 080.00			16		12			
BM 011.X1	11				6			
BM 040.X1					9			
DS 091.00				15	8			
DS 092.00				15	8			

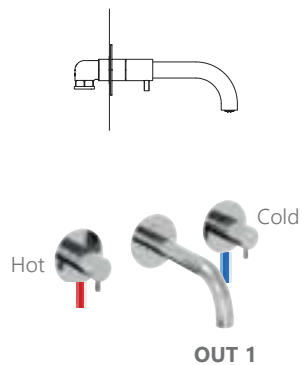


ES 019.XX.O1
ES 021.XX.O1




OUT 1
Hot Cold
ES/EL 062.XX.O1



 OUT 2
Hot Cold
OUT 1
ES/EL 061.XX.O2
TD / TD F / CL: 061.XX

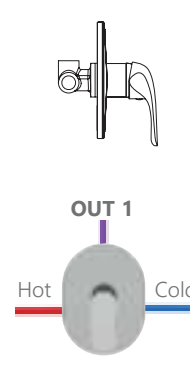

OUT 1
Hot Cold
CR 064.00

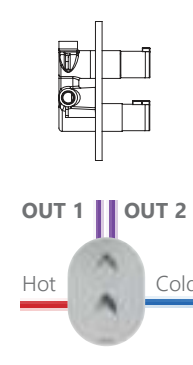 


OUT 1 OUT 2
Hot Cold
CR 063.XX

RB 07B.50




ES/EL 019.00.O1.RB07B

 RB 07C.50

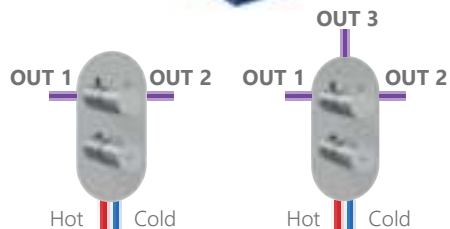


ES 063.XX.O2.RB07C ES 067.XX.O3.RB07C

 RB 07D.50

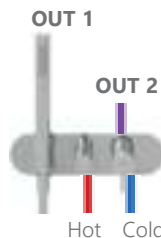


ES/EL 065.XX.O2.RB07D.+S

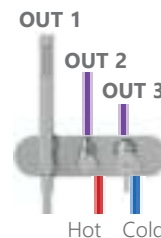 


ES/EL 068.XX.O3.RB07D.+S

 RB 07E.50

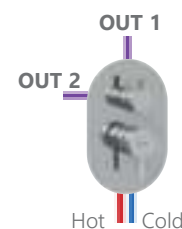


ES/EL 065.XX.O2.RB07E

 RB 07F.50

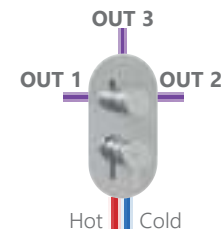


ES/EL 068.XX.O3.RB07F

 RB 070.50

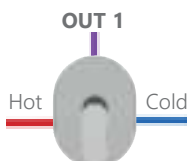


CR / TD / TD F / CL: 066.XX

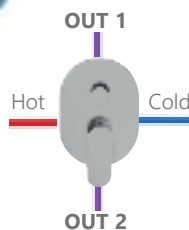 


CR / TD / TD F / CL: 065.XX

 RB VARI 072.50

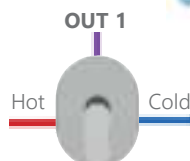


FL 066.XX

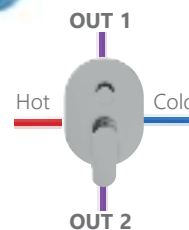 

FL 065.XX

 RB Multi 071.50

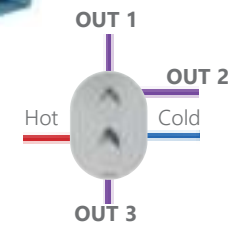

CR 067.00